

# TEMPERATURE CONTROLLER PROGRAMMER 33 X 72



Quick Guide • ISTR - FKR 3ENG 06



viale Indipendenza 56, 27029 - Vigevano (PV) - ITALY  
Tel.: +39 0381 698 71, Fax: +39 0381 698 730  
internet site: [www.ascontecnologic.com](http://www.ascontecnologic.com)  
E-mail: [sales@ascontecnologic.com](mailto:sales@ascontecnologic.com)

## MODEL CODE

The hardware resources are identified by the following Model Code.

Model: KR 3 A B C D E F G H I - 0 0 0 0

Line	KR	3
Optional functions	A	
None		-
Timer		T
Power Supply	B	
100...240 Vac (-10...+10%)	H	
24 Vac (-25...+12%) or 24 Vdc (-15...+25%)	L	
Input	C	
TC, PT100, Pt1000, mA, mV, V + Digital Input 1	C	
TC, NTC, PTC, mA, mV, V + Digital Input 1	E	
Output OP1	D	
Relay (1 SPST NO, 4 A/250 Vac)	R	
VDC for SSR (12 Vdc/20 mA)	O	
Analogue Output (0/4...20 mA, 0/2...10 V)	I	
Output OP2	E	
None		-
Relay (1 SPST NO, 2 A/250 Vac)	R	
VDC for SSR VDC (12 Vdc/20 mA)	O	

## DECLARATION OF CONFORMITY AND MANUAL RETRIEVAL

KR3 is a panel mounting, Class II instrument. It has been designed with compliance to the European Directives. All information about the controller use can be found in the Engineering Manual: ISTR-MKR-ENGoX ("x" is the revision). The Declaration of Conformity and the manual of the controller can be downloaded (free of charge) from the web-site: [www.ascontecnologic.com](http://www.ascontecnologic.com)

Once connected to the web-site, search: KR3 then click on KR3. In the lower part of the product page (in any language) is present the download area with links to the documents available for the controller (in the available languages).

### ⚠ Warning!

- Whenever a failure or a malfunction of the device may cause dangerous situations for persons, things or animals, please remember that the plant must be equipped with additional devices which will guarantee safety.
- We warrant that the products will be free from defects in material and workmanship for 18 months from the date of delivery. Products and components that are subject to wear due to conditions of use, service life and misuse are not covered by this warranty.


### Disposal

The appliance (or the product) must be disposed of separately in compliance with the local standards in force on waste disposal.

### ⚠ Warning!

All the order codes not present in the tables that follow (Digit A: Code P, Digit E: Code M, Digit F: Code M) are fully described in the "Engineering Manual" that can be freely downloaded from Ascon Technologic web site.

## DISPLAY AND KEYS

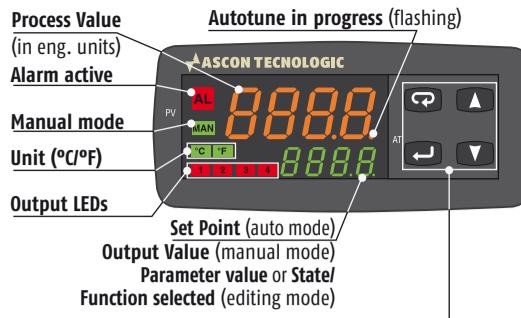


Operator Mode		Editing Mode
Access to:	- Operator Commands	Confirm and go to Next parameter
	- Parameters	
	- Configuration	
Access to:	- Operator additional information	Increase the displayed value>Selects the parameters list next element
	- Set Point	
Access to:	- Set Point	Decrease the displayed value or select the previous element
Programmable key:	Start the programmed function (Autotune, Auto/Man, Timer ...)	Exit from Operator commands/Parameter setting/Configuration
□ + ☱	These 2 keys, pressed in sequence, allow to toggle between MANual and AUTO modes.	

## DIMENSIONS

Overall dimensions (L x H x D): 78 x 35 x 69.5 mm (3.07 x 1.37 x 2.73 in.)  
Panel Cut-out (L x H): 71+0.6 x 29+0.6 mm (2.79+0.023 x 1.14+0.023 in.)


## MOUNTING

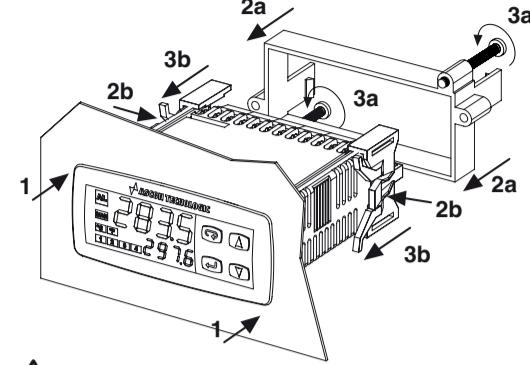


### ⚠ Attention

The controller can be installed using 2 different types of brackets. Follow the sequence 1, 2a, 3a for the screw bracket (collar bracket for IP65), the sequence 1, 2b, 3b for the "butterfly" brackets (2 pieces).

## ELECTRICAL CONNECTIONS

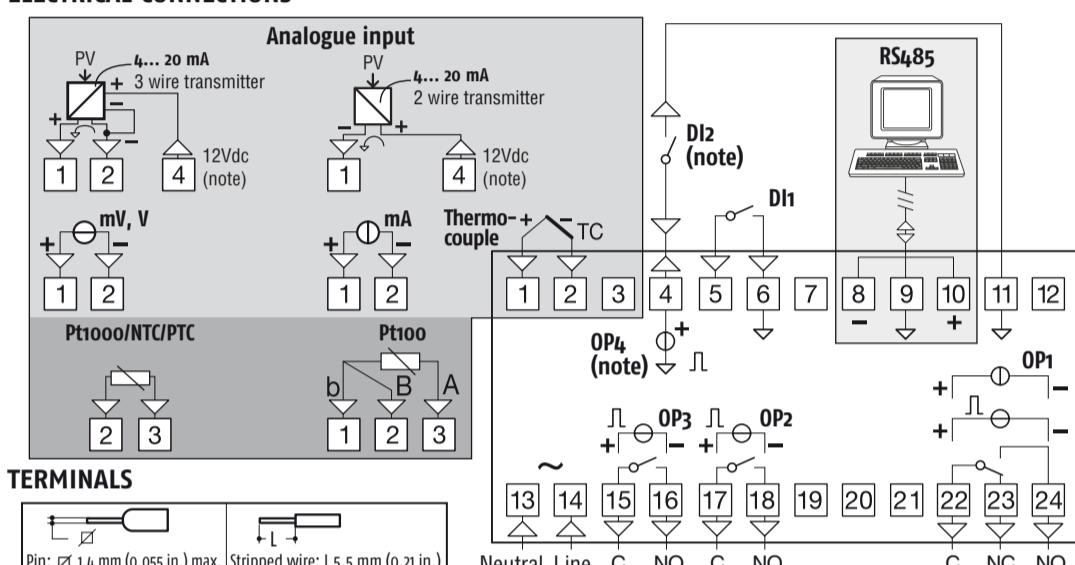

## TERMINALS




### Note:

Terminal 4 can be programmed as:

- Digital Input (DI2) connecting a free of voltage contact between terminals 4 and 11;
- 0...12 V SSR Drive Output (OP4) connecting the load between terminals 4 and 11;
- 12 Vdc (20 mA) transmitter power supply connecting the 2 wire transmitter between terminals 4 and 1; for 3 wire transmitter connect terminal 4 to transmitter power supply input and terminal 1 and 2 to transmitter signal output.

Supply voltage: 100...240 Vac/18...28 Vac/20...30 Vdc

## HOW TO SET THE CONFIGURATION CODE

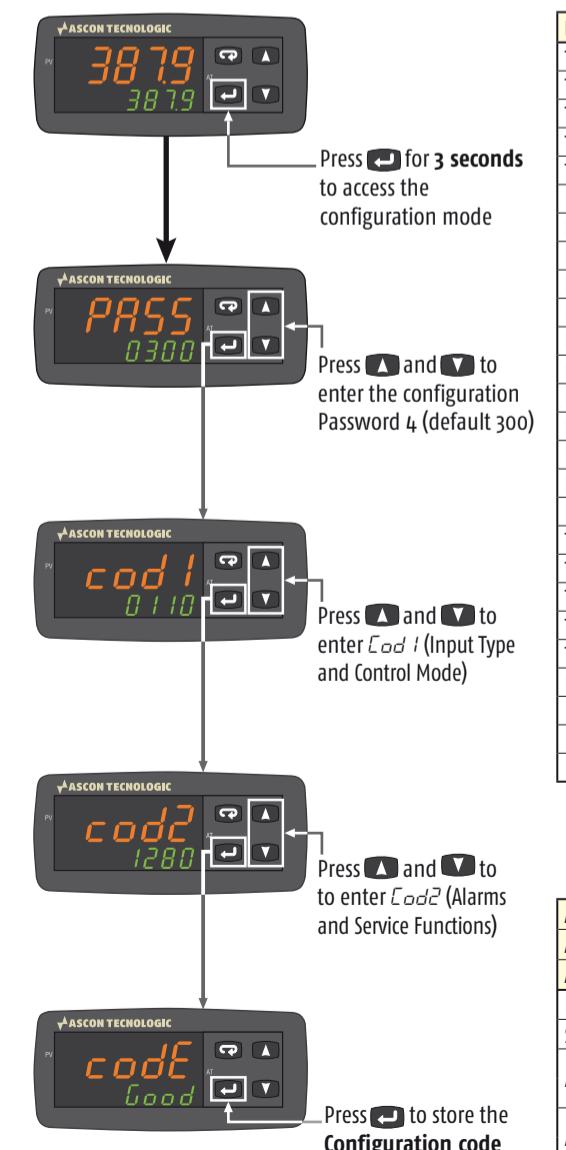

Note: To leave the Configuration session without saving the settings made, press the ☷ key

## CONFIGURATION CODE

The KR3 can be easily configured by the "Code Configuration" method for the most common requirements, just entering two 4-digit codes: Cod 1 [LMNO] for the Input Type and Control Mode selection and Cod2 [PQRS] for the Alarms and the Service Functions.

For complete controller configuration see the Engineering Manual.

Note: Before starting the configuration code setting, please define and write down Cod1 and Cod2 as needed:

User Cod 1	L M N O	Cod 1
<b>Input Type and Range</b>		
TC J	-50...+1000°C	0 0
<b>Control mode</b>		
TC K	-50...+1370°C	0 1
TC S	-50...1760°C	0 2
TC R	-50...+1760°C	0 3
TCT	-70...+400°C	0 4
Infrared J	-50...+785°C	0 5
Infrared K	-50...+785°C	0 6
PT100/PTC KTY81-121	-200...+850°C/-55...+150°C	0 7
PT100/NTC 103-AT2	-200...+850°C/-50...+110°C	0 8
Linear 0...60 mV	0 9	
Linear 12...60 mV	1 0	
Linear 0...20 mA (this selection forces Out 4 = TX)	1 1	
Linear 4...20 mA (this selection forces Out 4 = TX)	1 2	
Linear 0...5 V	1 3	
Linear 1...5 V	1 4	
Linear 0...10 V	1 5	
Linear 2...10 V	1 6	
TC J	-58...+1832°F	1 7
TC K	-58...+2498°F	1 8
TC S	-58...3200°F	1 9
TC R	-58...+3200°F	2 0
TCT	-94...+752°F	2 1
Infrared J	-58...+1445°F	2 2
Infrared K	-58...+1445°F	2 3
PT100/PTC KTY81-121	-328...+1562°F/-67...+302°F	2 4
PT100/NTC 103-AT2	-328...+1562°F/-58...+230°F	2 5
User Cod2	P Q R S	Cod2
<b>Alarm 3</b>		
Alarm 2		Q
Alarm 1	P	
Not used	0 0	0 0
Sensor break	1 1	1 1
Absolute	High	2 2
	Low	3 3
Absolute High/Low	External High/Low	4 4
	Internal High/Low	5 5
Deviation	Deviation high	6 6
	Deviation low	7 7
Band	External band	8 8
	Internal band	9 9
<b>Service functions activation</b>		
None		0
Wattmeter (instantaneous power expressed in kW) (note 1)		1
Wattmeter (Power consumption expressed in kWh/h) (note 2)		2
Absolute worked time (expressed in days) (note 3)		3
Absolute worked time (expressed in hours) (note 4)		4

Note: As default, when the alarms are active, only AL1 threshold is available at "Operator Command" level to perform non critical tasks. To protect the AL2 and AL3 thresholds against undesired changes, they are available only at "Parameters list" level (password: 20). For different configurations, see the Engineering Manual.

1. Wattmeter Instantaneous power is continuously computed as multiplication of the Load Voltage, Load Current parameter values and the controller output instantaneous value.
2. Wattmeter power consumption is the estimated hourly energy consumption (using Load Voltage and Load Current parameter values), computed on the previous 15 minutes period. The readout is updated every 15 minutes.
3. Worked Time counter is continuously increased when the controller is turned ON.

## ALARM TYPES (Cod2 digits: P, Q, R)

